


right solutions. right partner.

Pushing the Boundaries on Quantitative PFAS Analysis

ALS Canada

Presented by: Tammy Chartrand



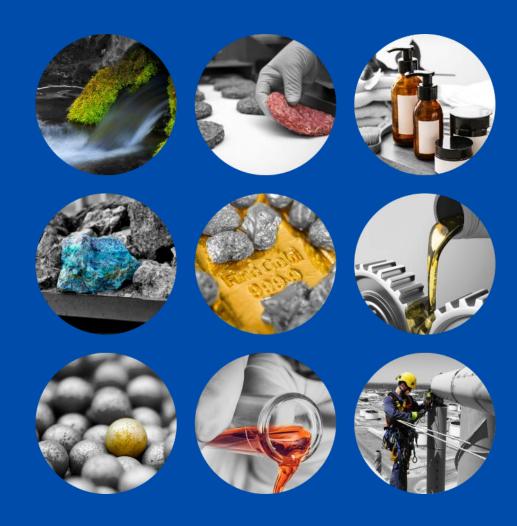

Pushing the Boundaries on Quantitative PFAS Analysis

ALS Canada
Presented by: Tammy Chartrand

Outline



- PFAS Chemistry
- Sources and Exposure Concerns
- Canadian Regulations and Guidelines
- Analytical Options for PFAS analysis
- New Analytes of Concern
- Trace Analysis
- Sampling Considerations
- Quality Considerations

PFAS Chemistry



- Group of synthetic chemicals containing more than 5000 compounds formed from carbon chains with fluorine attached to these chains.
- PFAS = perfluorinated and polyfluorinated substances
- PERfluorinated all carbons are saturated with fluorine
- POLYfluorinated
 — not all carbons are attached to fluorine
- PFOS and PFOA are fully fluorinated and the most common perfluorinated chemicals.

PFOA - perfluorooctanoic acid

PFOS - perfluorooctanesulfonic acid

PFAS Precursors



- Thousands of compounds are considered PFAS, including complex molecules, many of which are not measured by standard analysis
- These PFAS compounds are know as PFAS Precursors, and are released into the environment along with targeted PFAS compounds – often referred to as precursor pool, or PFAS "dark matter"
- These precursors can transform to PFAS "end-points" Perfluoroalkyl Acids (PFAAs) over time
- These end point products do not degrade further (ex. PFOS and PFOA)
- Traditional PFAS analysis only targets the key analytes and select precursors, this may or may
 not greatly underestimate the presence of PFAS in the environment, and have serious
 implications on remedial efforts.
- Potential for target compounds to "appear" or increase unexpectedly in the future (liability)

Conceptual representation of example copolymers: a. ester-linked NMeFOSE methacrylate

b. urethane-linked NMeFOSE

Alternatives



- Short-chain PFAS
 - PFCAs with < eight carbons</p>
 - PFSAs with < six or carbons</p>
 - Eliminated by humans more quickly
 - Ex. PFBS as replacement for PFOS

PFBS


- Replacement Compounds
 - Alternatives such as GenX, and Adona used by manufacturers to replace regulated PFOA

GenX

Properties and Uses of PFAS



- Beneficial Properties
 - Fire resistant
 - Oil, grease, water and
 - stain repellent
- Common Applications
 - Fire fighting foams (AFF)
 - Cookware
 - Clothing
 - Cosmetics
 - Food Packaging
 - Cleaners
 - Paper, Leather, Textiles
 - Paints
 - Wire insulation

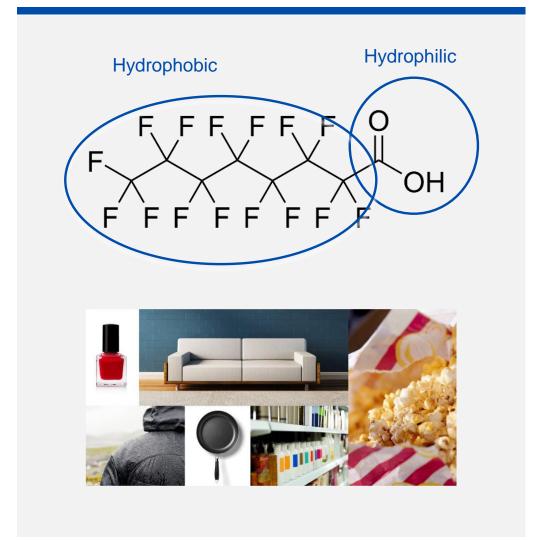

PFAS Sources



- Direct sources are from manufacturing and waste, spills or use as AFFF (Aqueous Film Forming Foam).
- Indirect sources are from use of household and packaging products. Further contamination through landfill and waste water treatment plants and transformation of precursors.



Human Health Concerns



- Most exposure to PFAS is from the intake of contaminated food and drinking water. Consumer products are a minor portion of the exposure.
- Concerns are mainly <u>chronic toxicity</u>
 - Not biotransformed or metabolized
 - Can be eliminated primarily by urine
- The following potential health risks have been linked to PFAS exposure:
 - Thyroid disease
 - High cholesterol
 - Increased risk of Testicular cancer and kidney cancer
 - Pregnancy-induced hypertension
 - low Infant birth rates
 - Liver damage



Environmental Concerns



- Stable, persistent and bioaccumulative
 - can travel long distances in the environment, and up the food chain
 - Accumulates in tissues of plants and animals
 - Can bind to particulates and water droplets in the air to be transported long distances



Federal Guidelines for Drinking Water (HC)



Health Canada Guidelines for Canadian Drinking Water Quality

	Maximum acceptable concentration (MAC) (μg/L)
110/1	0.2
PFOS	0.6

- When both PFOS and PFOA are found together:
 - Divide concentration of each by its MAC
 - The sum of the results should be less than 1 for water to be considered safe for drinking

Federal Drinking Water Screening Values (HC)



- Health Canada Drinking Water Screening Values for other PFAS
 - 9 PFAS compounds
 - Based on limited review of existing science
 - Developed based on data using PFOS and PFOA

	Drinking Water Screening Value (µg/L)
PFBA	30
PFBS	15
PFHxS	0.6
PFPeA	0.2
PFHxA	0.2
PFHpA	0.2
PFNA	0.02
6:2 FTS	0.2
8:2 FTS	0.2

Federal Soil Screening Values : Soil (HC)



	Soil Screening Values (mg/kg)			
	Agricultural / Residential Parkland Use	Commercial Land Use	Industrial (Commercial without Toddler) Land Use	
PFOS	2.1	3.1	30.5	
PFOA	0.70	1.05	9.94	
PFOS + PFOA	$\frac{[PFOS]}{SSV_{PFOS}} + \frac{[PFOA]}{SSV_{PFOA}} \le 1$	$\frac{[PFOS]}{SSV_{PFOS}} + \frac{[PFOA]}{SSV_{PFOA}} \le 1$	$\frac{[PFOS]}{SSV_{PFOS}} + \frac{[PFOA]}{SSV_{PFOA}} \le 1$	
PFBA	114	173	1630	
PFBS	61	92	872	
PFPeA	0.8	1.21	11.41	
PFHxS	2.3	3.5	33	
PFHxA	0.80	1.21	11.41	
PFHpA	0.80	1.21	11.41	
PFNA	0.08	0.13	1.2	
6:2 FTS	0.80	1.21	11.41	
8:2 FTS	0.80	1.21	11.41	

Environmental Quality Guidelines for PFOS



• FEQG for Surface Water, Fish Tissue, Wildlife Diet and Bird Egg

Water (ug/L)	Fish Tissue (mg/kg ww)	Wildlife Diet (µg/kg ww food)		Bird Egg (ug/g)
		Mammalian	Avian	
6.8	9.4	4.6	8.2	1.9

CCME Guidelines for PFOS



 CCME Guidelines for PFOS in soil and groundwater for the Protection of Environmental and Human Health posted September 23rd 2021

Soil Quality Guidelines for PFOS (mg/kg dry weight)				
		Land Use		
	Agricultural	Agricultural Residential/ parkland Commercial		
Final Guideline	0.01	0.01	0.01	

Groundwater quality guidelines for PFOS (mg/L) considering ecological and			
	Soil Type		
Final Guideline	0.0006	0.0006	Final Guideline

Provincial Regulations




- BC
 - Only province with any kind of provincial standard
 - PFOS, PFOA and PFBS regulated in water, PFOS and PFBS are regulated in soil under the Contaminated Sites Regulation

- Ontario
 - MECP released a guidance value for assessing the potable groundwater pathway (2020)
 - Recommend to use value of 70 ng/L to compare the summed concentration of 11 PFAS parameters

PFAS Analytical Options



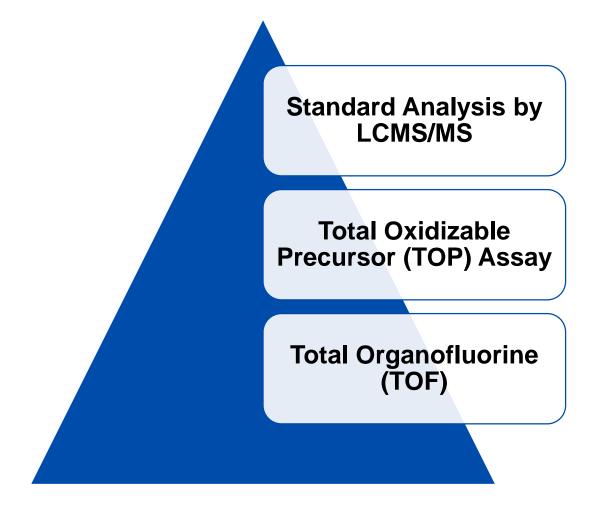

Option 1: Standard Analysis by LCMS/MS



- Water (Routine and low level)
 - Two options for reporting limits:
 - 1. Routine reporting limits (0.01-0.1 ug/L) by direct injection using isotope dilution liquid chromatography/tandem mass spectrometry (LC-MS/MS). *only for water*
 - Meets all current guidelines and screening values
 - 2. <u>Low Level reporting limits</u> (0.001-0.05 ug/L) by solid phase extraction (SPE) pre-concentration followed by analysis using isotope dilution liquid chromatography/tandem mass spectrometry (LC-MS/MS).
- Soil (low level)
 - Low level reporting (0.1-0.5 ug/kg) by aqueous
 Extraction followed by SPE pre-concentration,
 and analysis by LC-MS/MS
- Low level Analysis can also be used for Serum and Tissue Samples



Option 2: Total Oxidisable Precursor Assay (TOP Assay)



- There are thousands of chcemicals that can be classed as PFAS chemicals.
 - Accredited laboratories typically determine around 30-50 of these specific chemicals.
 - The bulk of these chemicals may be tied up in derivatives of PFAS (precursors)
- TOP Assay (Houtz and Sedlak 2012) is designed to expose underlying PFAS not amenable to standard analysis.
- Two data sets are provided: Pre- and Post- Oxidation
- Samples is oxidized to transform any precursor compounds into PFAS end products




• The difference between these data sets will give an idea of precursor levels found in the sample

Branched vs Linear Isomers



- PFOS in the environment is usually a mixture of branched and linear isomers
- Quantitation using a mixed linear/branched standard will be more representative of environmental contamination and therefore more accurate.
- Mixed standards used for PFOS, PFHxS, NMeFOSAA and NEtFOSAA

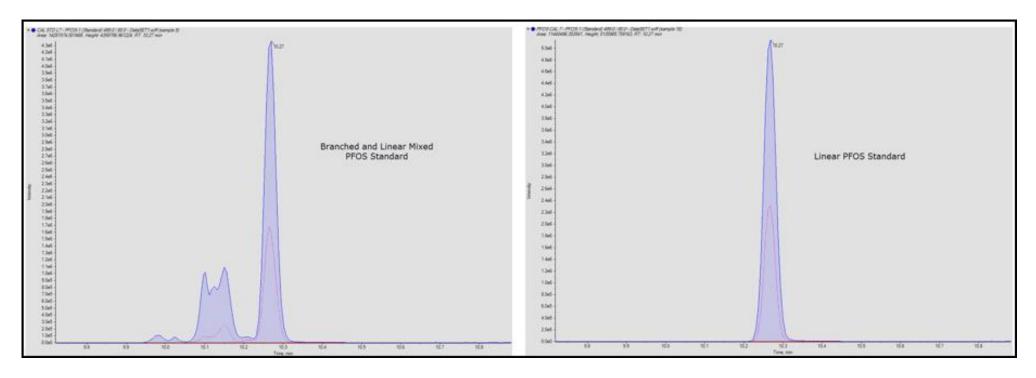


Use of Linear vs branched/liner standards for perfluorooctane sulfonate (PFOS)

Option 3: Total Organofluorine (TOF)



- Simple way to account for the total mass of PFAS in a sample
- The analysis reports concentration of organic fluorine (weight of fluorine per mL or per gram)
- On average, Fluorine accounts for approximately 65% of the total mass so TOF concentrations need to be multiplied by ~ 1.5 to estimate the maximum total PFAS content
- Combustion Ion Chromatography (CIC) higher RLs (0.02 mg/L, 0.1-1 mg/kg)

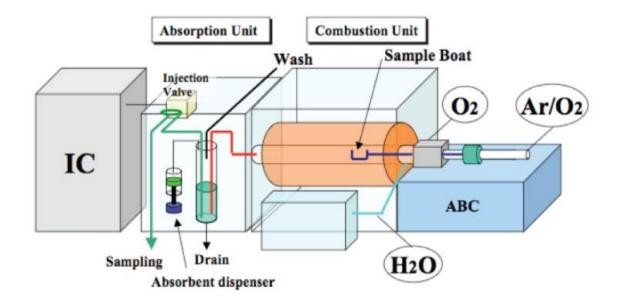

PFAS Analysis – Uses and Limitations



- Standard Analysis by LCMS
 - Beneficial Uses: Quantitative data for <u>target</u> analytes for regulatory purposes
 - Limitations:
 - Limited to the 30-50 target analytes (Does not account for the total "pool" of PFAS)
 - Does not account for potential PFAS from precursor transformation over time

TOP Assay

- Beneficial Uses: Indication of potential PFAS formation over time from precursors, indication of presence of PFAS outside of target analytes
- Limitations:
 - Still limited to target analyte list, and compounds that are oxidizable
 - Higher analytical cost (2 data sets per single sample)
 - Not fully quantitative

TOF

- Beneficial Uses: screening tool for high impact zones, verify the degree to which the TOP assay accounts for potential precursors, lower analytical cost, confirmation of AFFF product "PFAS free"
- Limitations:
 - Provides no information of chain length and not selective for PFAS
 - > Not as sensitive a technique (higher DLs) and therefore not suitable for low level screening

Combined Approach



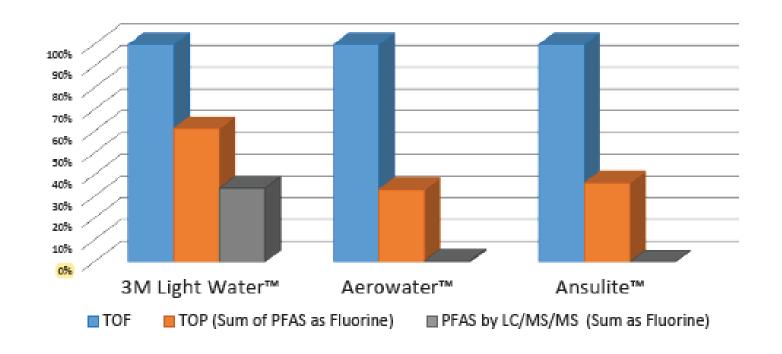


Figure 1. TOF vs TOP vs PFAS (LC/MS/MS) for 3 AFFF Products

Draft EPA Method 1633 – September 2021



- New draft method targeting 40 compounds in wastewater, surface water, groundwater, soil, biosolids, sediment, landfill leachate and fish tissue
- Fundamental Elements
 - LC/MS/MS with multiple reaction monitoring
 - Whole sample bottle extractions for water
 - Isotope Dilution where labelled PFAS isotopes are available (otherwise labelled internal standards)
 - SPE extraction to achieve lowest required DLs
 - Extensive cleanup to remove interferences
 - Quantification of both linear and branched PFAS isomers where relevant
- Performance criteria will be defined in the final approved version of the method, once multilaboratory validation studies are complete.

Extended Compound Lists

ALS

PFAS Sulfonic Acids	PFAS Carboxylic Acids	Perfluoroalkyl Sulfonamides & Sulfonamido Ethanols (Precursors)	Fluorotelo mers	PFAS Replacement Compounds	Other
PFBS	PFBA	PFOSA	4:2 FTS	ADONA	PFMPA
PFPeS	PFPeA	NMeFOSA	6:2 FTS	9CI-PF3ONS F-53B	PFMBA
PFHxS	PFHxA	NEtFOSA	8:2 FTS	11CI-PF3OUdS F-35B	NFDHA
PFHpS	PFHpA	NMeFOSE	10:2 FTS	HFPO-DA "Gen-X"	FDUEA
PFOS	PFOA	NEtFOSE	(3:3 FTCA) FPrPA		FHUEA
PFNS	PFNA	NMeFOSAA	(5:3 FTCA) FPePA		FOUEA
PFDS	PFDA	N-EtFOSAA	7:3 FTCA) FHpPA		
PFDoS	PFUnA		6:2 FTCA		
PFUdS	PFDoA		8:2 FTCA		
PFTrDS	PFTrDA		10:2 FTCA		
PFEESA	PFTeDA				


Rationale for New Analytes



New PFAS Analytes Available in Extended Suites				
Short Name	Name (Acid Form)	CAS#	Rationale for Addition	
3:3 FTCA	3:3 Fluorotelomer carboxylic acid	356-02-5	EPA 1633 - degradation	
5:3 FTCA	5:3 Fluorotelomer carboxylic acid	914637-49-3	products; major components of legacy landfill leachates.	
7:3 FTCA	7:3 Fluorotelomer carboxylic acid	812-70-4	EPA 1633 - degradation product	
NFDHA	Perfluoro-3,6-dioxaheptanoic acid	151772-58-6	EPA 1633 - food packaging	
PFEESA	Perfluoro(2-ethoxyethane)sulfonic acid	113507-82-7	EPA 1633 - replacement PFAS	
PFMPA	Perfluoro-3-methoxypropanoic acid	377-73-1	EPA 1633 - manufacturing	
PFMBA	Perfluoro-4-methoxybutanoic acid	863090-89-5	EPA 1633 - manufacturing	
PFecHS	n-Decafluoro-4-(pentafluoroethyl) cyclohexanesulfonic acid	646-83-3	aviation hydraulic oils	
6:2 FTUCA	6:2 Fluorotelomer unsaturated carboxylic acid	70887-88-6	degradation product	
8:2 FTUCA	8:2 Fluorotelomer unsaturated carboxylic acid	70887-84-2	degradation product	
10:2 FTUCA	10:2 Fluorotelomer unsaturated carboxylic acid	70887-94-4	degradation product	
6:2 FTCA	6:2 Fluorotelomer carboxylic acid	53826-12-3	degradation product	
8:2 FTCA	8:2 Fluorotelomer carboxylic acid	27854-31-5	degradation product	
10:2 FTCA	10:2 Fluorotelomer carboxylic acid	53826-13-4	degradation product	

Potential Degradation Pathway – 6:2 FTSAS



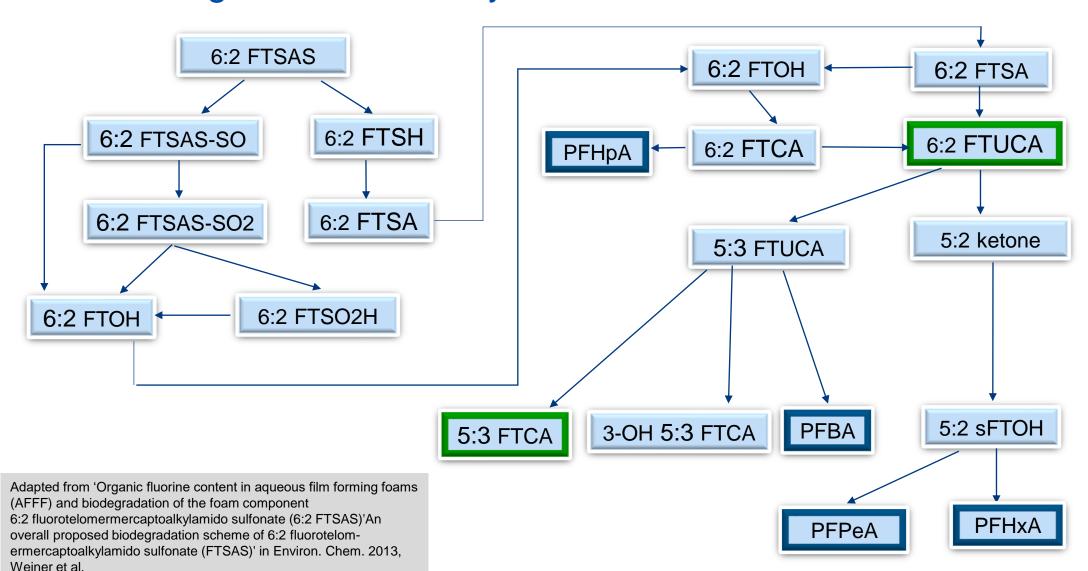

Trace Analysis for Water



- Industry seeking LORs down to 0.0001 µg/L
- Designed for water samples that are not expected to contain PFAS at high levels and is therefore not offered for high level contaminated samples or waste waters
- Enhanced internal laboratory segregation and controls
- LORs that maximize data quality, therefore will different from analyte to analyte (0.01 µg/L 0.0001µg/L)
- Pristine samples for trace level analysis should be separately bagged and marked "TRACE" to segregate in the field and lab and maximize data quality

Sampling Considerations



Below is a summary of items that **should not be used** by the personnel conducting sampling and acceptable alternatives where applicable

Not to be used	Acceptable alternative
Teflon™ pump or tubing	HDPE or Silicone tubing
Decon 90	Alconox®, Liquinox®, Citrinox®
LDPE or glass sample containers	HDPE or polypropylene containers ** ensure no Teflon™ liner
Chemical Blue Ice packs	Free ice
Waterproof field book	Metal clipboard / loose paper
Markers	Ball point pen or pencil, sharpie®
Water resistant or treated gloves / clothing	Powderless nitrile gloves / cotton clothing
Cosmetics, creams, sunscreen and related products	
pre-packaged food, aluminum foil, fast food wrappers or containers	
Plastic bags / packaging – screen before use	Polyethylene bags (Ziplock®)

^{**}This is not a full comprehensive list of all potential sources of PFAS contamination

Resource: Transport Canada PFAS Field Sampling Guidance Document (published in 2017)

Sampling Considerations (Draft EPA Method)



- Store on ice and submit within 48 hours
- Draft EPA method 1633 indicates that some perfluorooctane sulfonamide ethanols and perfluorooctane sulfonamidoacetic acids may potentially degrade into other PFAS compounds beyond 7 days (at ≤6°C).
- Samples can be frozen to extend hold time up to 90 days
- Samples may need to be extracted as soon as possible if NFDHA is an important analyte

Quality Considerations



- Focus on maximizing data quality and minimizing false positives
- "clean" and "dirty" sample segregation even more critical with larger analyte suites and every order of magnitude lower in testing becomes more challenging
- Optimum data quality is achieved by not pushing to see the lowest possible detection limits, but by offering a series of methods designed to meet specific needs

Special Thanks



right solutions. right partner.

Katrina Zwambag

Waterloo Business Manager +1 519 514 1849 katrina.zwambag@alsglobal.com

Sandra Cummings

LC/MS Manager +1 519 886 6910 sandra.cummings@alsglobal.com





Questions?

Testing Inquiries

Tammy Chartrand
M: +1 613 762 6966
tammy.chartrand@alsglobal.com